




Programming Procedure E-Series™ Remote Control

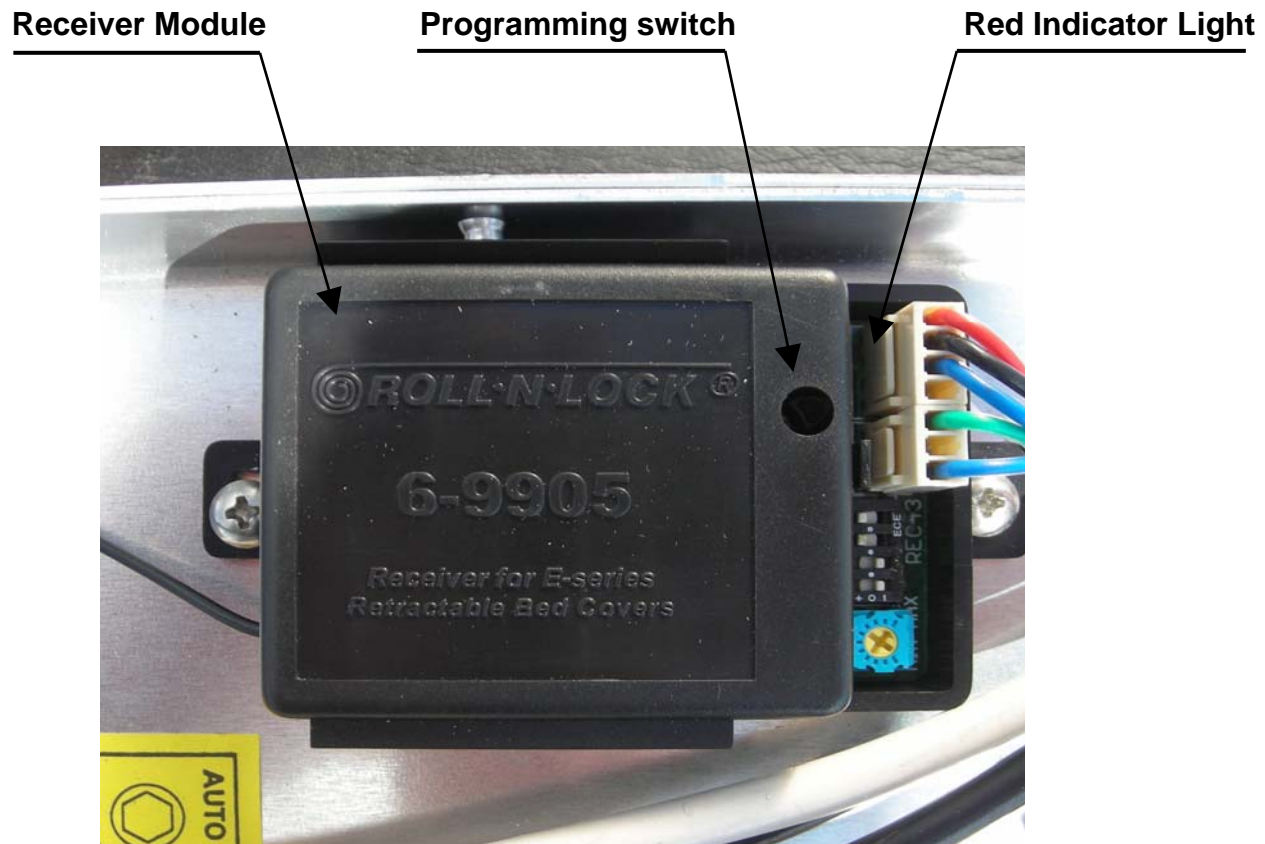

Before you begin, make sure the receiver unit is powered and that you have all the remotes to be programmed (Up to 4 per receiver). You will also need a small instrument such as a small screwdriver or toothpick to access and press the programming switch. The programming switch is located below the small hole on the top of the receiver's case.

Step 1: Press and hold the programming switch for 2 seconds. The red indicator light on the receiver will illuminate and the unit will softly chirp 4 times followed by a single loud chirp. At this point, release the programming switch.

Step 2: Press the "close" button on the 1st remote until you hear 1 chirp.

Step 3: Press the "open" button until you hear 2 chirps.

Step 4: Press the "light" button until you hear 3 chirps.

Step 5: Press the "light" button again until you hear 4 chirps.

Step 6: To program an additional remote, press the programming switch until you hear 2 chirps (indicating it is ready to receive the codes for the 2nd remote).

Step 7: Repeat steps 2 through 6 for each additional remote.

Note: If the unit detects 15 seconds of no activity between steps, it will exit programming and you will need to restart the procedure.